

# Breville

Breville is a registered trademark of Breville Pty. Ltd.  
ABN 98 000 092 928

## Breville Customer Service Centre

### Australian Customers

✉ Breville Customer Service Centre  
Locked Bag 2000  
Botany NSW 2019  
AUSTRALIA

☎ Customer Service: 1300 139 798

Fax (02) 9384 9601

Email Customer Service askus@breville.com.au

### New Zealand Customers

✉ Breville Customer Service Centre  
Private Bag 94411  
Greenmount  
AUCKLAND, NEW ZEALAND

☎ Customer Service: 09 271 3980

Fax 0800 288 513

Email Customer Service askus@breville.com.au

[www.breville.com.au](http://www.breville.com.au)



© Copyright. Breville Holdings Pty. Ltd. 2003

Due to continual improvements in design or otherwise,  
the product you purchase may differ slightly from  
the one illustrated in this booklet.



Model ECM2  
Issue 1/03

# Breville

# Caffeo

## Italian style espresso machine



## INSTRUCTIONS FOR USE

Model ECM2


## CONTENTS

	Page
Breville Recommends Safety First	4
Know your Breville Caffeo Espresso Maker	6
Operating Your Breville Caffeo Espresso Maker	7
Care and Cleaning	9

# Caffeo Espresso Maker

# Congratulations

on your purchase of your new  
Breville Caffeo Espresso Maker

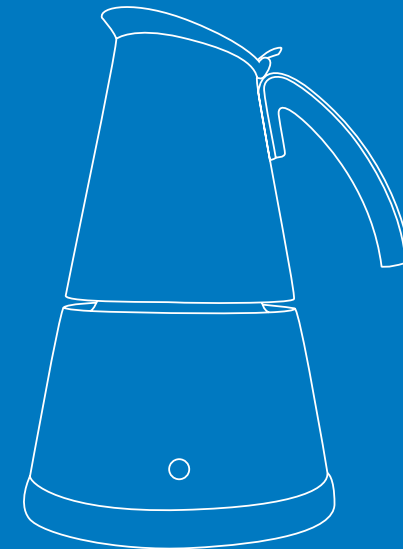

## BREVILLE RECOMMENDS SAFETY FIRST

We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using an electrical appliance and adhere to the following instructions:

### READ THESE INSTRUCTIONS BEFORE OPERATING AND SAVE FOR FUTURE REFERENCE

- This appliance has been designed specifically for the purpose of boiling drinking quality water. Under no circumstances should this product be used to boil other liquids or foodstuffs.
- Always use the appliance on a dry level surface.
- Do not touch hot surfaces. Use handle for lifting and carrying the appliance.
- The Coffee Maker must never be immersed in water or any other liquid.
- Never immerse the switch area, power base or cord in water, or allow moisture to come in contact with these parts.
- Keep clear of walls, curtains and other heat or steam sensitive materials. Minimum 200mm distance.
- The appliance is not intended for use by young children or infirm persons without supervision.
- This coffee maker should only ever be used with the power base provided with it and marked ECM2.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.
- Do not place on or near a hot gas burner, electric element, or in a heated oven.
- This appliance is intended for household use only. Do not use this appliance for other than its intended use.
- Do not use outdoors.
- Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing.



**THIS COFFEE MAKER SHOULD BE USED WITH A RESIDUAL CURRENT DEVICE (SAFETY SWITCH) TO LESSEN THE RISK OF SCALDING OR OTHER INJURY FROM HOT WATER THAT MAY BE EJECTED IF THE HEATING ELEMENT ERUPTS. DISREGARD THIS POINT IF YOUR HOME IS FITTED WITH A RESIDUAL CURRENT DEVICE (SAFETY SWITCH).**

## BREVILLE RECOMMENDS SAFETY FIRST

- Regularly inspect the supply cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return the entire appliance to the nearest authorised Breville service centre for examination, replacement or repair.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the espresso maker. See your electrician for professional advice.

## KNOW YOUR BREVILLE CAFFEO ESPRESSO MAKER

Hinged lid design

Stylish brushed stainless steel design

5 cup capacity (espresso cups)

Coffee filter basket



Power on/restart button

Auto cut off after brewing

Multi directional cordfree base

Espresso cup set



## OPERATING YOUR BREVILLE CAFFEO ESPRESSO MAKER

### BEFORE FIRST USE

Remove any promotional material attached to your espresso maker.

It is recommended that before using the espresso maker for the first time, fill it to the MAX mark and run it without using coffee as per the instructions below. Discard the hot water once the espresso maker automatically cuts off.

### OPERATION OF YOUR BREVILLE CAFFEO ESPRESSO MAKER

1. Fill with water

- Position the power base on a firm, level surface close to a power outlet. Ensure that the power plug is not plugged into a power outlet at this stage.
- Unscrew the carafe from the boiler, then lift the coffee basket out of the top of the boiler.



- Fill the carafe with fresh water up to, but not above the MAX mark inside the carafe (300ml).
- Use the carafe to pour water into the boiler.



2. Fill with coffee

- Fill the coffee filter basket with ground coffee to the rim and lightly tamp (press down) the coffee.
- Place the filter basket back into the boiler, running your finger along the rim to remove any loose coffee grounds and screw on the carafe.



**NOTE!!**

**For best results, use coffee ground for percolators.**

**The strength of the coffee can be reduced by using a lighter roast or using less ground coffee.**

**If the coffee is pressed down too hard in the filter basket, water will take longer to pass through the ground coffee resulting in a bitter taste.**

## OPERATING YOUR BREVILLE CAFFEO ESPRESSO MAKER cont'd

### 3. Brew coffee

- Screw the carafe back onto the top of the boiler.
- Push the On/Restart button and place the espresso maker on the multi directional power base.
- Plug the power supply cord into a 230/240V power point and switch on
- The On/Restart button will light up, and will stay on until the brewing is complete at which time the auto cut off feature will turn the unit off.
- Lift the espresso maker and pour.

The espresso maker may be stored on its cordfree base. The power should be switched off at the power outlet and then the power plug removed from the power outlet.



**NOTE!!**

**Always ensure that the on/restart button is pressed to operate the espresso maker**

**A pressure valve is fitted as a precaution to stop pressure from building if coffee blocks the holes in the filter basket.**

**If water can be seen dribbling down the side of the boiler, switch off the power outlet, unplug the power supply cord and allow the unit to cool down before cleaning the coffee filter basket.**

## CARE AND CLEANING

Always switch off at the power outlet, unplug the espresso maker from the power outlet and allow the unit to cool down before cleaning.

- Unscrew the carafe from the boiler.
- Place a saucer upside down on top of the coffee filter basket, hold in place, then invert the saucer and boiler together
- Lift the boiler off.
- Empty used coffee grinds into a bin and clean the coffee filter basket under a running tap.
- Use the carafe to fill the boiler with tap water to remove any loose coffee grinds before tipping the water out.

### TO CLEAN THE EXTERIOR

The outside of the espresso maker may be wiped over with a damp cloth and polished with a soft dry cloth.



**NOTE!!**

**Do not use chemical, steel or wool abrasive cleaners to clean the outsides of the espresso maker.**



**NEVER IMMERSE THE ESPRESSO MAKERS BOILER BASE, SWITCH AREA, POWER BASE OR SUPPLY CORD IN WATER, OR ALLOW MOISTURE TO COME IN CONTACT WITH THESE PARTS**

