

Kambrook - Australia

Building 2, Port Air Industrial Estate
1A Hale Street
Botany NSW 2019
Australia
Customer Service Line 1300 139 798
Customer Service Fax 1800 621 337

www.kambrook.com.au

Kambrook - New Zealand

Private Bag 94411
Botany, Manukau
Auckland 2163
New Zealand
Customer Service Line/
Spare Parts 0800 273 845
Customer Service Fax 0800 288 513

www.kambrook.co.nz

KAMBROOK

THE SMARTER CHOICE



Café Pronto Drip Coffee Machine

KDC150

Instruction Booklet

Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 0800 273 845 (New Zealand). Alternatively, visit us on our website at www.kambrook.com.au or www.kambrook.co.nz

Contents

Kambrook Recommends Safety First	p4
Your Kambrook Café Pronto Drip Coffee Machine	p7
Using Your Kambrook Drip Coffee Machine	p8
Care, Cleaning and Storage	p11

IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

Important Safeguards For Your Kambrook Café Pronto Drip Coffee Machine

- Carefully read all instructions before operating the Kambrook Drip Coffee Machine for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the Drip Coffee Machine for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this Drip Coffee Machine.
- When unpacking the Drip Coffee Machine, check to see you have received all the items listed in the parts list, before discarding the packaging.
- Do not place the Drip Coffee Machine near the edge of a bench or table during operation. Ensure that the surface is level, stable, clean and free of water and other substances.
- Do not operate the Drip Coffee Machine on a sink drain board.
- Always ensure the Drip Coffee Machine is properly assembled before use. Follow the instructions provided in this book.
- The Drip Coffee Machine must not be supplied through an external switching device, such as a timer, or connected to circuit that is regularly switched on and off by the utility.
- Do not use attachments other than those provided with the Drip Coffee Machine.
- Do not attempt to operate the Drip Coffee Machine by any other method other than described in this book.
- Do not leave the Drip Coffee Machine unattended whilst in operation or connected at the power outlet.
- Do not move the Drip Coffee Machine while it is switched on and/or in operation.
- Do not allow the cord to touch hot surfaces.
- Use only the carafe provided with the Drip Coffee Machine. Do not substitute the carafe with any other carafe.
- Do not place anything other than the carafe provided on top of the Drip Coffee Machine's hot plate. Do not place the carafe on a heated stove top or in a microwave oven.
- The Drip Coffee Machine's hot plate will always be heating when the machine is switched ON and turned on at the power outlet. Always switch the Drip Coffee Machine to the OFF position, switch off at the power outlet and unplug at the power outlet when not in use.

- Only use cold water in the water tank. Do not use de-mineralised water, mineral water, distilled water or any other liquid. Ensure correct water level is used. Never use the Drip Coffee Machine without water in the water tank.
- Do not overfill filter basket. Ensure the correct dose of coffee is used.
- Ensure the filter holder is firmly secured in position before starting the Drip Coffee Machine brewing process. To avoid possible burns from hot steam and water, never open the filter holder during brewing process.
- Do not leave the Drip Coffee Machine unattended while coffee is being brewed.
- Never remove the carafe from the hotplate during the brewing operation.
- Do not touch hot surfaces. High temperatures are generated during use which could cause burns. Always use the handle and warn others (especially children) of the possible dangers of burns from steam, hot water or hot plate, especially during and after brewing process.
- Allow the Drip Coffee Machine to cool down before moving or cleaning any parts.
- Do not refill water tank immediately after brewing process. Allow unit to cool for at least one hour before refilling water tank and starting the next brewing process.
- If the Drip Coffee Machine is not used for an extended period, disconnect the Drip Coffee Machine from the power outlet.
- Always switch off at the power outlet, and then unplug the appliance from the outlet:
 - Before filling with water or emptying it
 - Before leaving it unattended
 - Before attempting to move the appliance
 - Before cleaning and maintenance unless otherwise specified in this booklet
 - Immediately after use.
- Before starting the decalcifying process (or de-scale feature), ensure the carafe is empty and inserted correctly in position.
- The water tank should never be removed during decalcifying process (or de-scale feature).
- To prevent damage to the Drip Coffee Machine, do not use alkaline cleaning agents when cleaning; use a soft cloth and mild detergent.
- Store the unit out of reach of children.
- Do not store the Drip Coffee Machine with water in the water tank. Always empty the tank after use.
- Always store the Drip Coffee Machine and carafe in the upright position.
- Keep the Drip Coffee Machine clean. Follow the cleaning instructions provided in this book.

Important safeguards for all electrical appliances

- Fully unwind the power cord before use.
- Connect only to 230V or 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid, unless it is recommended in the cleaning instructions.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to inspect the appliance regularly. Do not use the appliance if the power supply cord, plug, connector or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

Your Kambrook Café Pronto Drip Coffee Machine

1. Removable filter holder and mesh filter basket (not shown)
 2. Large 10 cup capacity removable water tank with carry handle
 3. Non-drip valve system
 4. Glass carafe with hinged lid
 5. Power On/Off switch with power 'ON' indicator light
 6. Thermostat controlled hotplate
- Not Shown**
- 1100 watts for rapid brewing
 - Multiple flow system for optimum coffee extraction, dispenses hot water evenly



Using Your Kambrook Drip Coffee Machine

Before First Use

Remove any packaging material and promotional labels before using your drip coffee machine for the first time. It is recommended before using the drip coffee machine for the first time to clean it thoroughly.

Swing open the filter holder to access the filter basket. Remove the filter basket by pulling upwards and away from the holder. Wash in warm soapy water, then rinse and dry thoroughly. Replace filter back into the filter holder.

Fill the water tank up to the MAX (10) level mark with cold tap water and slide into position in the drip coffee machine. Position the empty carafe on the hotplate and switch the coffee machine 'ON'. Once all the water has dripped through and the glass carafe has cooled, remove the carafe from the hotplate and wash in hot soapy water. Rinse and dry thoroughly.

The drip coffee machine is now ready for use.

Operating Your Drip Coffee Machine

1. To fill the water tank, lift the lid and use the handle to remove the water tank from the back of the drip coffee machine. Fill the water tank to the desired level with cold tap water. Do not exceed the MAX (10) level mark. Slide the water tank back into the drip coffee machine and put the lid back on (see Fig.1).



WARNING: Only use cold water in the water tank. Do not use de-mineralised water, mineral water, distilled water or any other liquid. Ensure correct water level is used. Never use the drip coffee machine without water in the water tank.

TIP: The water tank is removable and can be taken to the sink to be filled. Alternatively, you can fill the empty glass carafe with water and pour into the water tank.

Swing open the filter holder to access the filter basket (see Fig. 2).



- Spoon ground coffee into the removable mesh filter basket. Allow approximately 1 heaped teaspoon of ground coffee for 1 cup of brewed coffee. Do not exceed the MAX level mark.



WARNING: Do not overfill filter basket. Ensure the correct dose of coffee is used.

NOTE: The filter basket is removable and should be washed in warm, soapy water after each use, then rinsed and dried thoroughly.

NOTE: Disposable coffee filters are not necessary and should not be used with or without the mesh filter basket.

- Close the filter holder by pushing it back into position. Ensure it clicks into place.
- Position the empty carafe on the hotplate.
- Plug the power cord into a 230V or 240V power outlet and switch on.
- Press the ON/OFF switch to the 'ON' position to turn on the drip coffee machine. The switch will illuminate and the coffee will start to brew.



WARNING: Do not touch hot surfaces. High temperatures are generated during use, which could cause burns. Always use the handle and warn others (especially children) of the possible dangers of burns from steam, hot water or hot plate, especially during and after brewing process.

- When brewing is complete, the hotplate will keep the coffee hot as long as the coffee machine is switched on.



WARNING: The drip coffee machine's hotplate will continuously heat as long as the coffee machine power switch is in the 'ON' position and the machine is switched on at the power outlet. Please switch off and unplug when not in use.

NOTE: Although brewed coffee can be kept hot in the carafe sitting on the hotplate with the coffee machine switched on for an indefinite period of time, the flavour of the coffee will deteriorate with time.

Using Your Kambrook Drip Coffee Machine Continued...

8. Switch the coffee machine to 'OFF' when the carafe is empty or when you no longer want to keep the coffee hot.
9. The drip coffee machine should be switched off at the power outlet then unplugged from the outlet when not in use.
10. Follow the cleaning instructions found in this booklet.



WARNING: Do not refill water tank immediately after brewing process. Allow unit to cool for at least one hour before refilling water tank and starting the next brewing process.



WARNING: Do not leave the drip coffee machine unattended while coffee is being brewed.

TIP: Always use finely ground coffee. If the coffee is too coarse, the water will pass rapidly through resulting in poor extraction of coffee flavour.

TIP: To maintain coffee freshness, store opened packs of coffee in air tight containers in a dry cool place.

Making Tea

The drip coffee machine can also be used for brewing tea.

Thoroughly clean out any coffee residue in the mesh filter basket and filter basket holder before brewing tea (and vice versa).

Simply place 4 to 6 teabags or teaspoons of tea in the mesh filter basket and follow the same procedure as for brewing coffee.

Care, Cleaning and Storage

Before cleaning, always switch the drip coffee machine in the 'OFF' position and switch off at the power outlet. Unplug the power cord and allow the coffee machine to cool.

Use the handle to push the filter holder to the left so it swings open. Remove and empty the mesh filter basket. The filter basket and carafe can be washed in hot soapy water, then rinsed and dried thoroughly.

The outer housing and filter holder can be cleaned with a soft, damp cloth (do not use abrasive agents or cloths which can damage the surfaces).



WARNING: Do not touch hot surfaces. Allow the drip coffee machine to cool down before moving or cleaning any parts.

Removing Mineral Deposits

Mineral deposits in tap water may build up in the water tank and internal tubes. If these deposits are not removed, the brew time will be extended. To start the decalcifying process, follow these steps:

1. Fill the water tank to the MAX (10) level mark with 2 parts cold tap water and 1 part white vinegar.
2. Ensure the filter holder is firmly positioned into place with the empty mesh filter basket inside.
3. Position the empty carafe on the hotplate and switch the coffee machine on. Allow the vinegar mixture to drip through the machine until the cycle is complete. Switch the machine off and empty the carafe.

4. Refill the water tank with tap water. Switch the coffee machine on and allow the fresh water to drip through. Switch the machine off and empty the carafe.
5. Once cooled, wash the carafe in hot soapy water, rinse and dry thoroughly.

Mineral deposits will have been removed from the water tank and internal pipes.



WARNING: Before starting the decalcifying process (or de-scale feature), ensure the carafe is empty and inserted correctly in position.



WARNING: The water tank should never be removed during decalcifying process (or de-scale feature).

Storage

Ensure the drip coffee machine is switched off, cleaned and dried before storing. Do not store anything on top.



WARNING: Do not store the drip coffee machine with water in the water tank. Always empty the tank after use.